

Fig. 0345 "In-Hose" Scupper Valve Installation Instructions

PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING

The in-hose inlet scupper valve is designed to install in the drain line next to the thru-hull at the exit of the boat.

Cat. Nos. 0345 and 0345DP can only be used with standard 1½" hose.

Cat. Nos. 0345002 and 0345DP2 can only be used with standard 2" hose.


Installation should be done by a qualified marine mechanic.

To install:

- 1) Make sure there will be at least 2" of straight hose section for the scupper valve (see dimension "A" in Diagram 1).
- 2) Prior to removing hose, mark the position of the end of the hose on the thru-hull hose barb.
- 3) Loosen hose clamps and disconnect the drain hose from the thru-hull.
- 4) Insert the valve into the drain hose (small diameter end first) until at least ½" of fill hose extends beyond the valve.
- 5) Re-attach fill hose by pushing onto the thru-hull barb until the hose reaches the original marked position.
- 6) Tighten using hose clamps in accordance with ABYC Hose Clamping Standards.

Diagram 1

Illustration of In-Line (Blue) Scupper Valve Installation

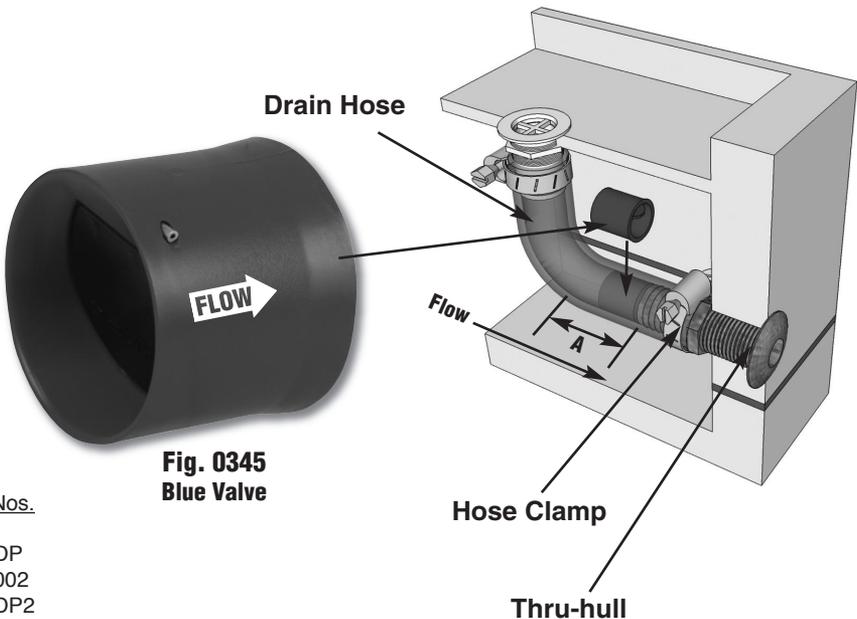

**Fig. 0345
Blue Valve**

Cat. Nos.
0345
0345DP
0345002
0345DP2