



Operating Instructions

Fig. Nos. 1324 Series Locking Caps for
0599 / 1399 Series Locking Fuel Fills and
1313 Gas Fill

Examine the Mounting Location of the fill and consider the limitations of the key cylinder with regards to potential water intrusion -- DO NOT locate on a substantially submerged or flooded surface, otherwise moisture can be drawn into the system.

To Unlock - Insert key, hold tabs and turn key counterclockwise to engage threads, unscrew cap.

To Lock - Screw cap into fill, insert key, hold tabs and turn key clockwise, remove key.

Note: When cap is locked, top portion will spin freely.